

installation instructions:

# PVC GABLE PEDIMENTS

## SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

Gable brackets are not load bearing, decorative use only.

## TOOL & MATERIAL CHECKLIST

- electric drill
- construction adhesive
- drill bit for pilot hole
- caulking gun
- countersink bit
- mechanical fasteners
- lag screws & washers
- caulk
- sandpaper

## IMPORTANT INFO

- It is highly recommended that you paint/finish our pediments before installation.
- Once installed, you can apply any necessary touchup paint/finish.
- Clean installation surface and pediment of all dirt and dust with a clean cloth or dry sponge.
- Measure and mark the location where the pediment is going to be installed.
- All PVC pediments are for decorative use only.


## INSTALL INSTRUCTIONS:

### Solid Decorative Pediments

1. **MARK INSTALLATION AREA-** Select the location for your Decorative Millwork. Hold the millwork in place and mark the location with a pencil.
2. **APPLY ADHESIVE-** Apply a 1/4" bead of PL Premium Adhesive to only the portion of the millwork surface that will touch the mounting surface.
3. **FASTEN MILLWORK INTO PLACE-** Press the millwork in place using the pencil marks as guides. Fasten securely with nails or screws. Countersink fasteners and fill holes with caulk or wood filler.
4. **FILL GAPS-** If desired, caulk around millwork, filling any gaps between millwork and mounting surfaces.
5. **FINISH AS DESIRED-** Sand any filled holes and touch up with paint or other finishes, as desired.

*Gable pediment decorations are screwed to the soffit, the bottom board of the eave. The fascia (eave face board) usually overhangs the soffit by a small amount. Gable Decorations are normally installed below and immediately behind the fascia. That is, they are mounted out from the wall, suspended just behind the front edge of the eave.*

## EXAMPLE DIAGRAM:

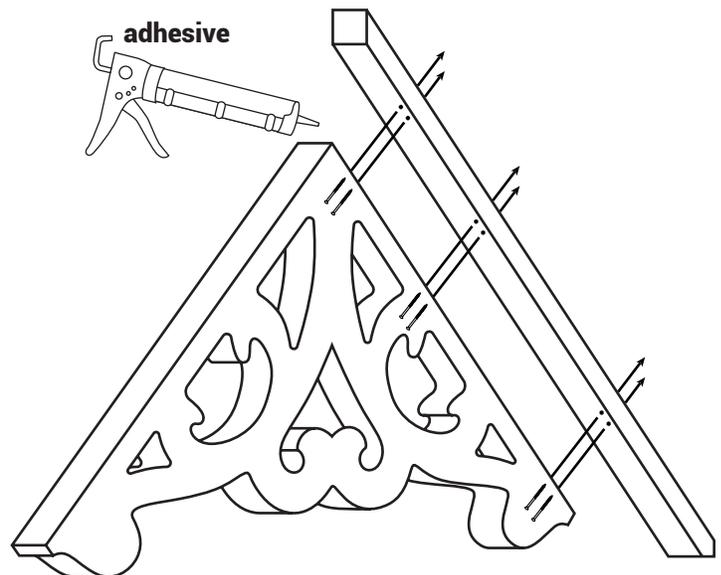

We Can Help. Call (866) 607-0453



**EKENA**  
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

[www.ekenamillwork.com](http://www.ekenamillwork.com)